



Installation and Operation

February 26, 2015
© 2009-2015 Graphx, Inc.

Contents

INTRODUCTION.....	2
WHAT'S IN THE BOXES	3
WORKFLOW	4
PHOTO GIZE LAB SETUP.....	5
<i>LAN setup</i>	5
<i>KeySweep setup</i>	6
<i>Internet setup</i>	6
UNPACK AND POWER-ON THE KIOSK.....	7
<i>Model HD/HD23</i>	7
MICROSOFT WINDOWS INITIALIZATION ON THE KIOSK.....	8
INSTALLING PHOTO GIZE KIOSK ON YOUR OWN HARDWARE	9
<i>Activation</i>	9
INITIALIZING PHOTO GIZE KIOSK.....	10
STARTING PHOTO GIZE KIOSK.....	14
ADMINISTRATION.....	14
CONFIGURING PHOTO GIZE KIOSK.....	17
<i>General</i>	17
<i>Workflow</i>	19
<i>Consumer Options</i>	21
<i>Quick Print</i>	24
<i>Express Options</i>	26
<i>Look and Feel</i>	27
<i>Specialty Products</i>	28
<i>About</i>	29
DEPLOYING KIOSK.....	30
PUTTING PRINT WIZARD ON KIOSK-PRODUCED CDS.....	31
USING KIOSK WITH PHOTO GIZE PRODUCER™	32
<i>Producer Only Mode</i>	32
<i>Demoing the UI</i>	33

Introduction

Photogize Kiosk is a powerful photo print order appliance that lets you easily create, edit, and submit print orders to the Photogize system. Photogize Kiosk is the ideal in-store consumer print station for Photogize-enabled retailers and features:

- Simple, consumer-friendly print ordering
- Easy administration
- Out-of-the-box Internet, LAN, or KeySweep™ connectivity
- Optional consumer web sharing of photos
- Easy-to-use photo editing tools
- One touch red-eye removal

Kiosk is delivered as a turn-key appliance or as a software application. If you have purchased Kiosk software, make certain that your installation PC meets the following minimum requirements:

- Intel Core Duo or Better
- 2GB+ of memory
- 200GB+ HD
- Windows 7.x or 8.x
- 1024x768, 1680,1050, or 1920x1080 full color display
- Internal or External memory card reader
- CDR or CDRW drive

Photogize Kiosk can be used with a mouse, but we strongly suggest that you use it with a touch screen monitor.

Please refer to the following keys when reviewing the Topics in this manual.

	Kiosk Appliance-only Topics
	Kiosk Software-only Topics
	Both Appliance and Software Topics



What's in the Boxes

Photogize Kiosk HD and HD23 are all-in-one units. They ship with the following:


- This manual
- Kiosk
- Power Supply
- Wireless keyboard and mouse

If you did not receive all these items, please contact Graphx.



Workflow

Photogize Kiosk can be used in any of three workflows. Orders can be placed In Store via a **LAN**. Orders can be placed remotely via the **Internet** to WebServices. You can sweep orders from an unconnected Kiosk using our **KeySweep** technology. And finally, you can **QuickPrint** to any connected printer that has an installed Windows print driver.

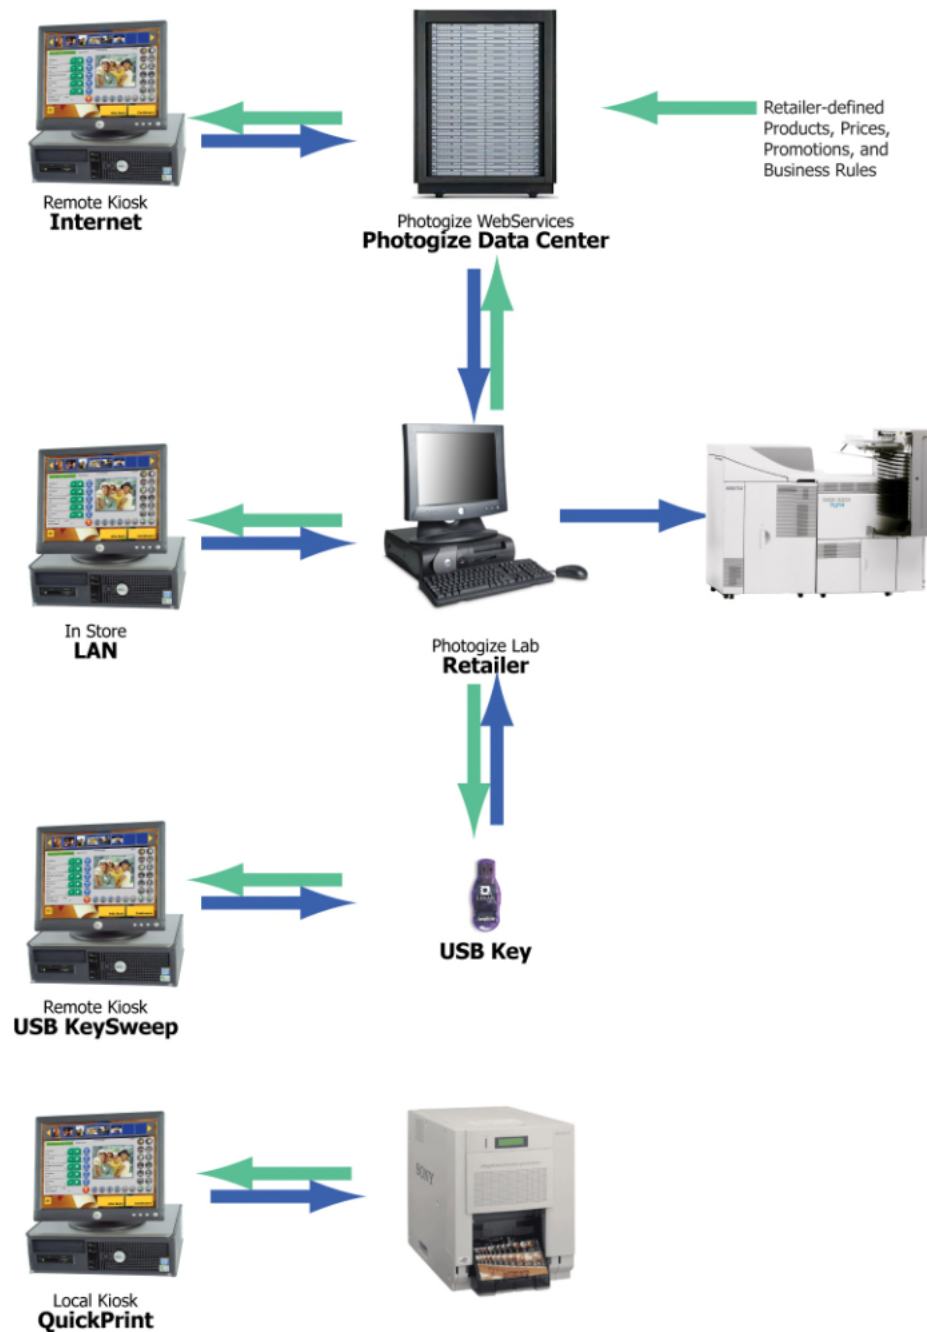




Photogize Lab Setup

Before installing or configuring Photogize Kiosk, you should make sure that you have configured Photogize Lab to accept Kiosk orders. Photogize Lab 3.0.7 or above is required for Photogize Kiosk support. Do Check for Updates in Lab to make certain you are using the latest version.

LAN setup

If you plan on feeding orders from Kiosk to Photogize LAN over your local area network, configure Photogize Lab in the following way:

1. Launch Photogize Lab
2. Select the Account to which Kiosk will feed orders. The prices, products, and business rules defined in this account will be used by Photogize Kiosk.
3. Do Account Properties, then click the XConnect tab

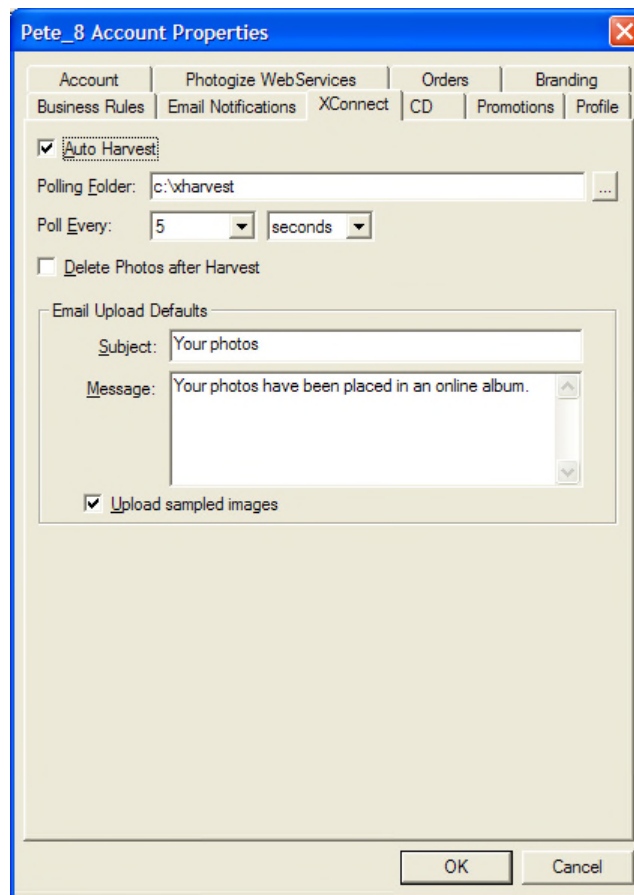

Check Auto Harvest and select a Polling Folder where Kiosk will place orders. Remember to use this same Polling Folder when setting up Kiosk.

KeySweep setup

If you plan on sweeping orders using KeySweep, you need only:

1. Select the account in Lab you wish to use to fulfill your orders.
2. Insert a USB Key (we recommend 1GB keys or larger) into the Photogize Lab PC.
3. Select **File...Publish Products, Logos, Profiles, and Business Rules to KeySweep.**
4. You will now need to import these rules into the Kiosk (see later sections)

To acquire KeySweep orders that you have extracted from your Kiosk, simply do **File...Import KeySweep Orders** in Lab.

Internet setup

If you plan to harvest orders via the Internet, make sure that you have a PhotoCentral account installed and enabled in Photogize Lab.



Unpack and Power-on the Kiosk

Model HD/HD23

1. Carefully remove the Kiosk from the box and place it upright on a tabletop.
2. Remove protective plastic packing from the device.
3. Put batteries into the wireless keyboard and mouse and power them on.
4. Connect the power cord to the back of the base unit and plug the other end into a 110/220 outlet.
5. Power-on the unit by touching and holding the "house" button in the lower right of the front panel.



Microsoft Windows initialization on the Kiosk

Microsoft Windows may guide you through initial system setup the first time you power-on if you received the hardware directly from the manufacturer. During this setup, you will need to specify your time zone, network specifics, etc... Please consult with your network administrator if you have questions concerning your network configuration.

You will find that a user with administrative privileges has already been created. This is the user under which the system will boot when restarted. If you want the system to automatically start the Kiosk application after a reboot, do not assign a password to this user.

Once initialization is complete, the system will restart and the Kiosk license manager will be displayed, followed by the Photogize Kiosk initialization screens.



Installing Photogize Kiosk on your own Hardware

If you downloaded the Photogize Kiosk installation application from the web, double click on the `PhotogizeKioskInstall.exe` application to initiate the installation. Otherwise, insert the Photogize Kiosk CD into your drive and let Windows autorun initiate the installation. If the installation does not start, browse to the CD and double click on `setup.exe`.

The Photogize Kiosk Installer will install the application on your PC in a few minutes. At the end of the installation, the Photogize Kiosk application will launch.

Activation

The Kiosk software must be activated after installation. You have fourteen days to activate the Kiosk software. If you have not activated the software in this time period, the software will no longer load. To activate the software, go to the **Kiosk Admin** screen, click **Configure Kiosk**, click the **About** tab, then click the **License Manager** button. Click the **Activate** button on the License Manager dialog. If you have activation questions, please post a ticket on the Photogize HelpDesk (<http://www.photogize.com/helpdesk>).




Initializing Photogize Kiosk

A configuration wizard will be presented to you the first time you run Photogize Kiosk software.

The first page after the Welcome page gives you the option to password protect access to the administration configuration pages of Photogize Kiosk. Enter an optional admin access password (and retype it in the confirm password entry field) here. You may leave these fields blank.



On the second page, select the mode in which you wish to operate the Kiosk.

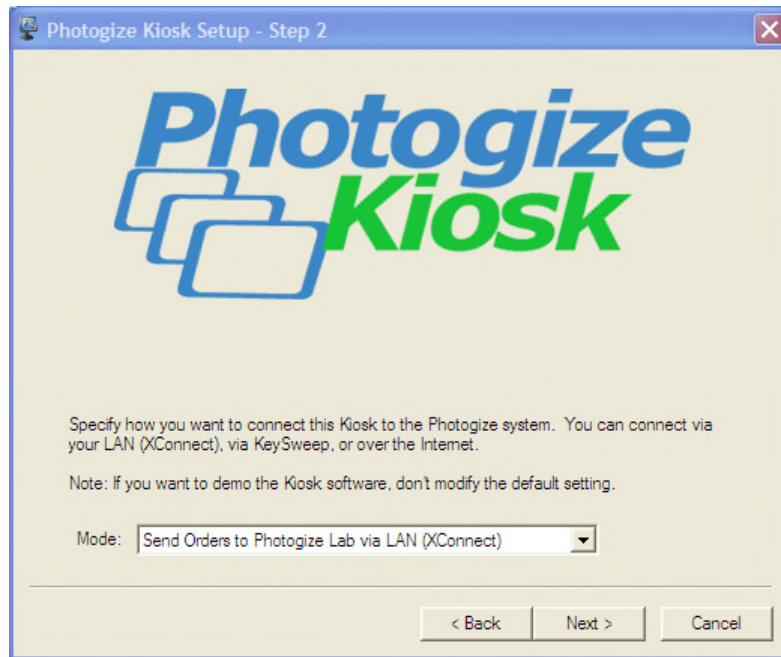

The modes are:

Send Orders to Photogize Lab via LAN

Print orders from Kiosk will get sent to the XConnect folder you specify in Photogize Lab.

Send Orders to Photogize Lab via Internet


Print orders from Kiosk will get uploaded to Photogize Servers.

Save Orders for KeySweep


Print orders will be stored on the Kiosk until they are swept off using the KeySweep admin tool.

The next page lets you specify the sources of your photo files. Check *Use Automatic Photo Sources* to tell Kiosk to automatically search all non-network drives for photos. If unchecked, the *Photo Sources* field should be populated with drives or folders separated by semicolons.

For example, let's say that you have a media reader that uses drives E, F, G, and H, you would put `e:\;f:\;g:\;h:\` in the field. You can also put folder specifications in this field (e.g: `d:\my photos\`).

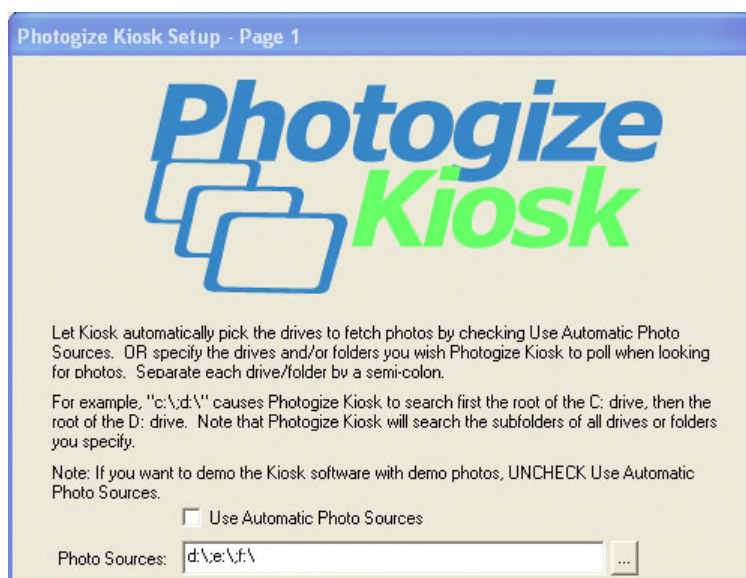

The next page lets you specify the logo that is displayed at the top of the kiosk pages. The file can be a JPEG, TIFF, or BMP. The recommended size is 1844 pixels wide by 75 pixels high for the HD23 and 980 pixels wide by 75 pixels high for the SD.

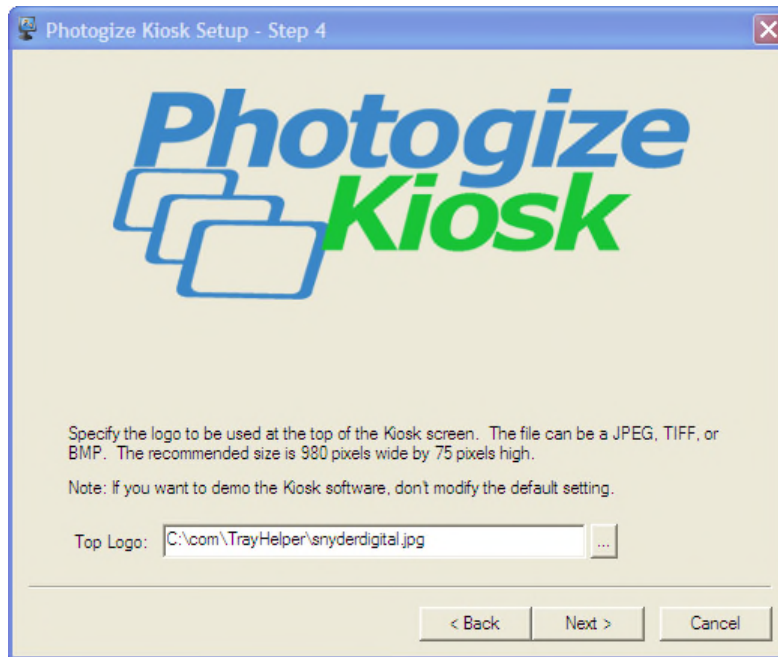

The next page lets you specify specifics for KeySweep, XConnect, or your Internet connection.





Starting Photogize Kiosk


To launch the Kiosk application, do **Start...Programs..Graphx...Photogize Kiosk** from the **Start** menu. You will see a screen like the following:



This is the main screen that the consumer will see. Touch anywhere to place a print order. The Kiosk software will guide you through the order process.

Administration

To access the administrative settings, touch the key button in the lower left. The Kiosk main administration page looks like this:

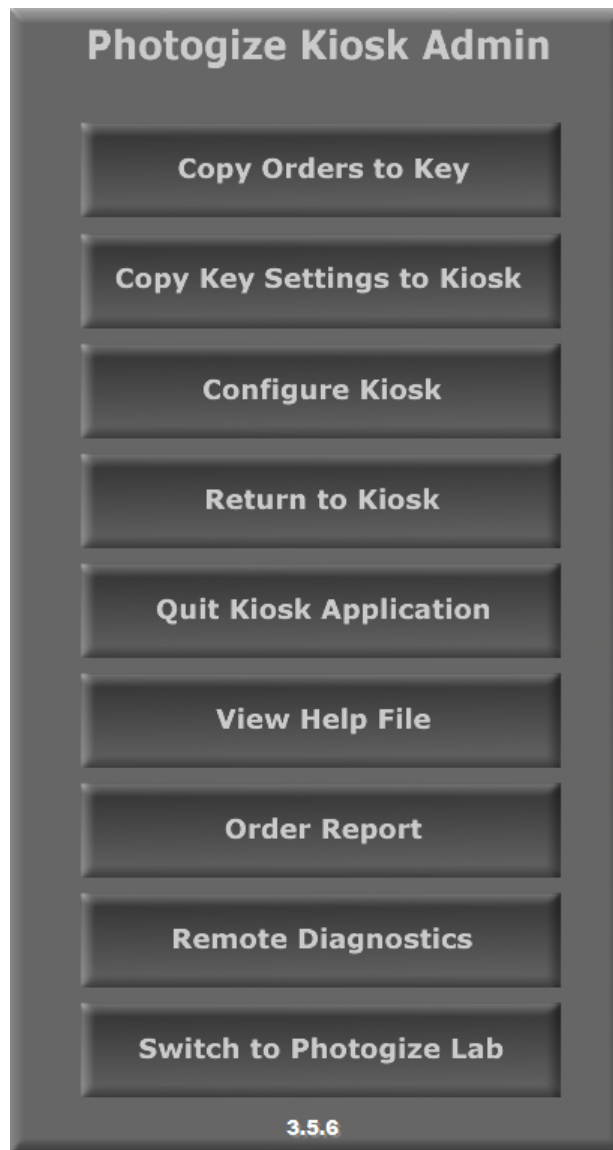

The choices are:

Copy Orders to Key

Touch to copy orders from the Kiosk to your KeySweep key.

Copy Key Settings to Kiosk

Touch to copy the settings you exported to your key using Photogize Lab to the Kiosk.

Configure Kiosk

Touch to make configuration settings.

Return to Kiosk

Return to the Kiosk interface

Quit Kiosk Application

Touch to quit the Kiosk application and return to Windows.

View Help File

Touch to view this help file.

Order Report

Touch to view a report of Orders. You can resubmit or copy orders from the Order Report page.

Remote Diagnostics

Touch to connect to a Photogize service technician who can remotely control and diagnose your kiosk. Only click this after establishing phone contact with a Photogize service representative.

Switch to Photogize Lab

Switch to the running copy of Photogize Lab on a Photogize KIO Kiosk.



Configuring Photogize Kiosk

General

When you select Configure Kiosk, a series of property pages will be presented to you.

The screenshot shows the 'Photogize Kiosk Configuration' dialog box with the 'General' tab selected. The dialog has a title bar with a close button. Below the title bar are three tabs: 'Express Options', 'About', and 'Specialty Products'. Under 'Express Options', there are five sub-tabs: 'General' (selected), 'Workflow', 'Consumer Options', 'Quick Print', and 'Look and Feel'. The 'General' sub-tab contains the following fields and options:

- Admin Access Password:** A text input field.
- Next Order Number:** A text input field containing '1001228'.
- Specify Photo Sources:** A dropdown menu.
- Exclude Drives:** A text input field.
- Photo Sources:** A text input field containing 'C:\com\TrayHelper\KioskProducerDebug\Demo Samples' and a browse button (...).
- Check All Sources:** A checked checkbox.
- Use Folder Select:** A checked checkbox.
- Wait for Photo Load:** An unchecked checkbox.
- Skip Load Screen:** A checked checkbox.
- Sort By:** A dropdown menu set to 'Name'.
- Order:** A dropdown menu set to 'Ascending'.
- Valid Extensions:** A text input field containing 'jpg;tif;tiff'.
- Ignore Photos less than:** A text input field containing '3'.
- KB in size:** A label.
- Retain Embedded ICC Profiles:** An unchecked checkbox.
- AutoPrint Receipt:** A dropdown menu set to 'No'.
- Hide Cursor:** A dropdown menu set to 'No'.
- Top Logo:** A text input field containing 'C:\com\TrayHelper\snyderdigital.jpg' and a browse button (...).
- Location ID:** A text input field containing 'Photogize Kiosk'.
- Backup Orders for:** A dropdown menu set to '3'.
- days:** A label.
- Keep Local Report for:** A dropdown menu set to '30'.
- days:** A label.
- Automatically Check for Updates:** An unchecked checkbox.

At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'Apply'.

The General Page contains the following options:

Admin Access Password

Enter a password required to enter admin mode in the kiosk.

Next Order Number

The next order number used by Kiosk when creating a *LAN*, *Internet*, or *KeySweep* order. The number will be incremented each time a new order is placed.

Specify Photo Sources

If selected, Kiosk will poll all sources listed in the *Photo Sources* field.

Automatic Photo Sources

If selected, Kiosk will automatically poll all non-network drives, excluding the drive on which Photogize Kiosk is installed.

No Photo Sources

If selected, Kiosk will not poll any folder or drives sources for photos.

Exclude Drives

A list of drives, separated by semicolons, that Kiosk will ignore when using Automatic Photo Sources (e.g: d:\; h:\)

Photo Sources

If *Use Automatic Photo Sources* is unchecked, Kiosk will search the specified path(s) for photos. Each path should be separated by semicolons. For example, let's say that you have a media reader that uses drives E:, F:, G:, and H:, you would put e:\; f:\; g:\; h:\ in the field. You can also put folder specifications in this field (e.g: d:\my photos\).

Check All Sources

If unchecked, Kiosk will stop checking Sources for photos once it has found photos. If checked, Kiosk will check for photos on *all* Sources.

Use Folder Select

If checked, Kiosk will present all folders with photos to the user. The user can select/unselect these folders before proceeding.

Wait for Photo Load

If checked, Kiosk will not let consumer get past photo loading screen until all photos have been loaded onto local hard drive.

Skip Load Screen

If checked, Kiosk will skip the photo loading screen and proceed directly to the order pages.

Sort By

Specify the sorting key for photos that the Kiosk acquires. You can specify sorting by *Name*, *Date*, or *Size*.

Order

Specify the sorting order for photos that the Kiosk acquires. You can specify sorting by *Ascending*, or *Descending*.

Valid Extensions

The extensions that Kiosk will use to determine whether to include a file, found in Photo Sources, in the photo selected list. The extensions should start with a period and be separated by semi-colons.

Ignore Photos less than

Specify the minimum size in KB by which Kiosk will consider a file to be a valid photo. This helps Kiosk ignore thumbnails on a photo CD.

Retain Embedded ICC profiles

If checked, Kiosk will maintain embedded ICC profiles when resampled images are submitted via LAN or WAN.

AutoPrint receipt

If Yes, Kiosk will automatically print a receipt to the default Windows printer.

Hide Cursor

Set to Yes if you are running a touch screen, NO, if you are using a mouse and keyboard.

Top Logo

Select the logo file displayed at the top of most Kiosk screens. This logo will override any account logos.

Location ID

Enter some text that helps you discern this Kiosk from others you have deployed. The Location ID will show up in Lab when it receives orders.

Backup Orders

Specify the number of days that Photogize Kiosk will keep a backup of placed orders.


Keep Local Report for

The number of days that Kiosk will retain order information (info only – no photos).

Automatically Check for Updates

If checked, Kiosk will check for online updates to the application when the program launches and when the Admin screens are invoked. You should only check this if Kiosk has a direct connection to the Internet.

Workflow

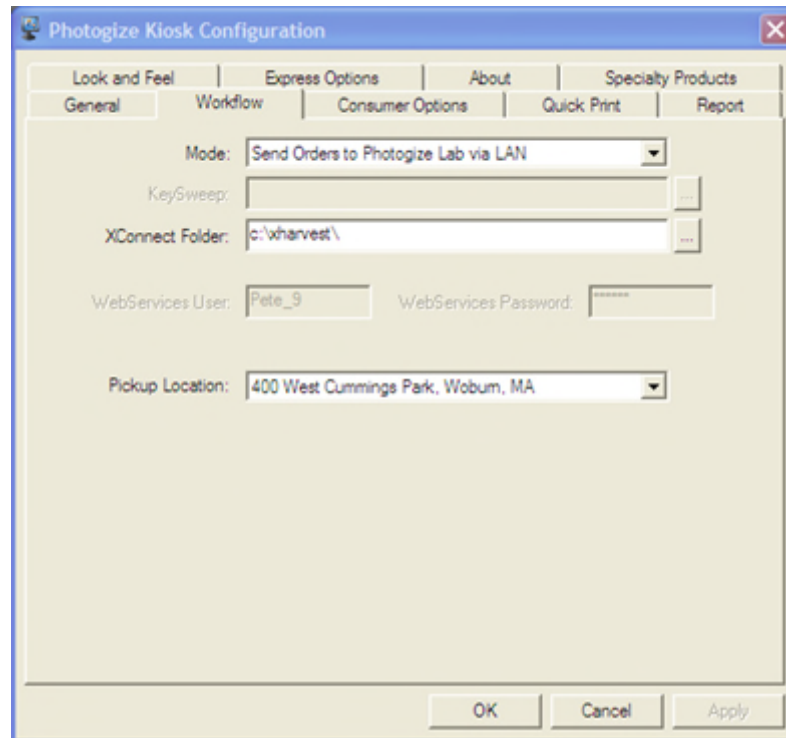

The Workflow page contains the following options:

Mode

Select the method that Kiosk will use to gather business rules and submit orders. You can specify *Send Orders to Photogize Lab via LAN* if your Kiosk is connected to Photogize Lab with xconnect; *Send Orders to Photogize Lab via Internet* if Kiosk connects over the Internet to Photogize Lab; *Save Orders for KeySweep* if you are transferring business rules and orders with a USB key; *Quick Print ONLY* if this Kiosk is intended to be used for Quick Printing only.

KeySweep

Specify the Key Sweep drive. (Key Sweep mode)

XConnect Folder

Specify the XConnect folder that Kiosk and Lab point to. (*LAN mode*)

WebServices User

Enter the user name for your WebServices account. (*Internet mode*)


WebServices Password

Enter the password for your WebServices account. (*Internet mode*)

Pickup Location

The pickup location associated with this Kiosk (used for tax rules).

Consumer Options

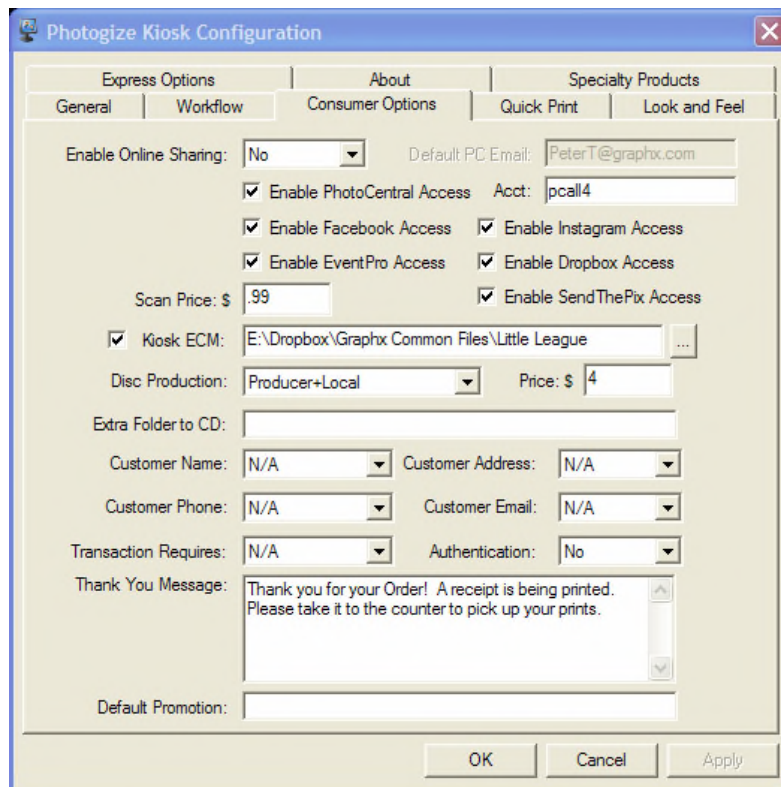

The image shows a screenshot of the 'Photogize Kiosk Configuration' window, specifically the 'Consumer Options' tab. The window has a title bar with a close button. Below the title bar are three tabs: 'Express Options', 'About', and 'Specialty Products'. The 'Consumer Options' tab is selected. The main area contains various settings:

- Enable Online Sharing:** A dropdown menu set to 'No'.
- Default PC Email:** A text field containing 'PeterT@graphx.com'.
- Enable PhotoCentral Access:** A checked checkbox.
- Acct:** A text field containing 'pcall4'.
- Enable Facebook Access:** A checked checkbox.
- Enable Instagram Access:** A checked checkbox.
- Enable EventPro Access:** A checked checkbox.
- Enable Dropbox Access:** A checked checkbox.
- Enable SendThePix Access:** A checked checkbox.
- Scan Price:** A text field containing '\$.99'.
- Kiosk ECM:** A checked checkbox and a text field containing 'E:\Dropbox\Graphx Common Files\Little League'.
- Disc Production:** A dropdown menu set to 'Producer+Local'.
- Price:** A text field containing '\$ 4'.
- Extra Folder to CD:** An empty text field.
- Customer Name:** A dropdown menu set to 'N/A'.
- Customer Address:** A dropdown menu set to 'N/A'.
- Customer Phone:** A dropdown menu set to 'N/A'.
- Customer Email:** A dropdown menu set to 'N/A'.
- Transaction Requires:** A dropdown menu set to 'N/A'.
- Authentication:** A dropdown menu set to 'No'.
- Thank You Message:** A text area containing the message: 'Thank you for your Order! A receipt is being printed. Please take it to the counter to pick up your prints.'
- Default Promotion:** An empty text field.

At the bottom of the window are three buttons: 'OK', 'Cancel', and 'Apply'.

The Consumer Options page contains the following options:

Enable Online Sharing

If set to Yes, the consumer will be allowed to electronically share their photos with friends and family.

Default PC Email

The member email that will be used to “own” albums that are shared by non-PhotoCentral members over the internet.

Enable PhotoCentral Access

If checked, consumers will be able to access their PhotoCentral albums and photos.

Acct

Your PhotoCentral account.

Enable Facebook Access

If checked, consumers will be able to access their Facebook photos and Facebook Friends’ photos.

Enable Instagram Access

If checked, consumers will be able to access their Instagram photos.

Enable EventPro Access

If checked, consumers will be able to access albums and photos from an EventPro account.

Enable Dropbox Access

If checked, consumers will be able to access albums and photos from their Dropbox account.

Enable SendThePix Access

If checked, consumers will be able to access photos uploaded from the SendThePix mobile website.

Scan Price

Set an optional price per photo scan.

Kiosk ECM

If checked, Kiosk will poll the folder(s) in the accompanying field for content. Click the “...” button to add or replace folders from the Easy Content Management field.

Disc Production

If set to *Local*, your customers can burn CDs of their photos at the Kiosk. If set to *Producer* (only available if Photogize Lab is Producer-enabled), or *Producer+Local* customers will be able to burn Producer Premium DVDs and CDs.

Price

If *Enable CD Burning* is set to *Local* or *Producer+Local*, you set the unit price per CD here.

Extra Folder to CD

Kiosk will copy the contents of the specified folder and all subfolders to the root folder of the CD.

Customer Name, Address, Photo, and Email

You can require or make optional, the gathering of this consumer information.

Transaction Requires

Set to *Credit Card* if you have attached a credit card swipe to the Kiosk. Kiosk will request that the consumer swipe their credit card prior to completing the Kiosk order. The credit card information will be securely passed along with the

order. Set to *Online Credits* if consumers may only order using online credits that are set in RetailerCentral.

Authentication

If set to *Yes*, allow consumers to login with their PhotoCentral credentials. If set to *Required*, then only consumers who login may proceed with an order.


Thank You Message

Enter the text you wish to display when a consumer has completed a print order.

Default Promotion

Key in the code for a promotion that you want to always apply to every order.

Quick Print

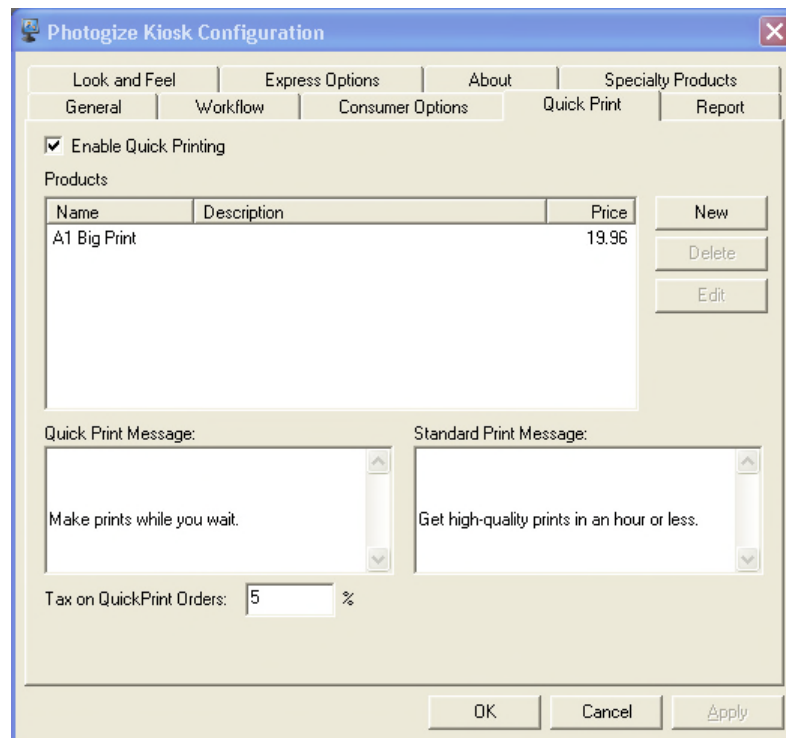

The image shows a screenshot of the 'Photogize Kiosk Configuration' window, specifically the 'Quick Print' tab. The window has a blue title bar and a menu bar with options: Look and Feel, Express Options, About, and Specialty Products. Below the menu bar is a sub-menu bar with: General, Workflow, Consumer Options, Quick Print (selected), and Report. The main content area includes a checkbox labeled 'Enable Quick Printing' which is checked. Below this is a 'Products' section with a table. The table has three columns: Name, Description, and Price. It contains one row: 'A1 Big Print' with a price of '19.96'. To the right of the table are three buttons: 'New', 'Delete', and 'Edit'. Below the table are two text areas: 'Quick Print Message:' containing 'Make prints while you wait.' and 'Standard Print Message:' containing 'Get high-quality prints in an hour or less.' At the bottom left is a label 'Tax on QuickPrint Orders:' followed by a text box containing '5' and a '%' symbol. At the bottom right are three buttons: 'OK', 'Cancel', and 'Apply'.

Name	Description	Price
A1 Big Print		19.96

The Quick Print page lets you set up print-at-kiosk products that Kiosk will fulfill using locally connected printers. To enable Quick Printing, click the *Enable Quick Print* checkbox. Then click *New* to add a product. Other options:

Quick Print Message

The way you describe quick printing to the consumer.

Standard Print Message

The way you describe standard printing to the consumer.

Tax on QuickPrint Order

Since QuickPrint jobs do not pull business rules from any account, you must specify the tax percent (if any) to add to a print order here.

When you click *New*, the following dialog will appear:

The options are:

Name

Give a name to the Quick Print product.

Description

Describe the Quick Print product.

Device

Select the locally connected (or network-connected) printer to which you wish to print. You must have an installed Windows print driver for any device to which you wish to print.

Media

Specify the media on which you wish to print. Kiosk will print a cropped photo to the full size of the media.


Border

Specify a print border in pixels.

Price

Assign a price to the Quick Print product. The pricing for Quick Print products can be different than the pricing for standard products.


Express Options

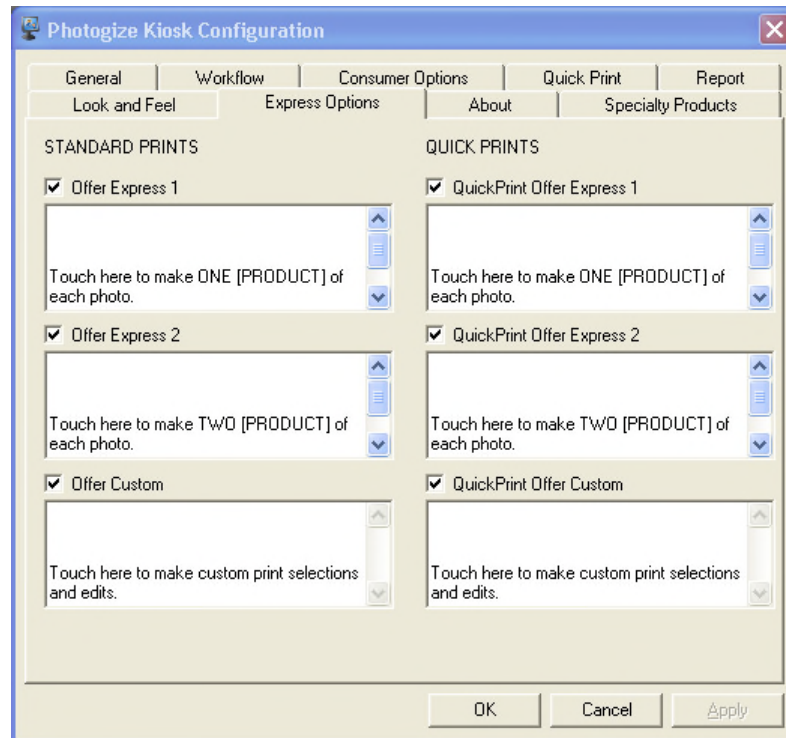

The Express Options page lets you set the availability of Kiosk express printing options. *Express 1* always makes one print of each photo using the first product defined by Photogize Lab. *Express 2* always makes two prints of each photo using the first product defined by Photogize Lab. Check or uncheck the options you wish to offer for Standard printing and Quick printing.

You can also edit the messages that get displayed for each option on this page.

Look and Feel

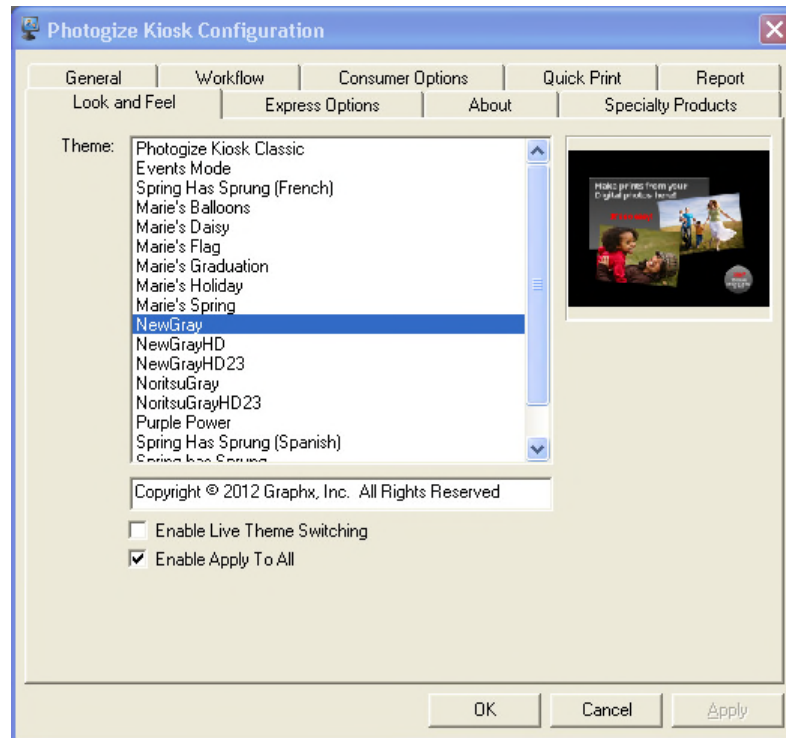

The Look and Feel page lets you select the Kiosk Theme. Kiosk Themes are dynamic sets of images, fonts, and colors that constitute the visual “look” of the Kiosk. You can create your own Themes using standard Windows image editing software.


Enable Live Theme Switching

If checked, every theme that has a `liveswitch=language.png` statement in its skin.ini file will be displayed as selectable option on the main kiosk page. Please contact Graphx for more information on creating Kiosk Themes.

Enable Apply To All

If checked, an Apply To All button will be displayed on the consumer print selection page that lets consumers apply their copy count selection to all photos.

Specialty Products

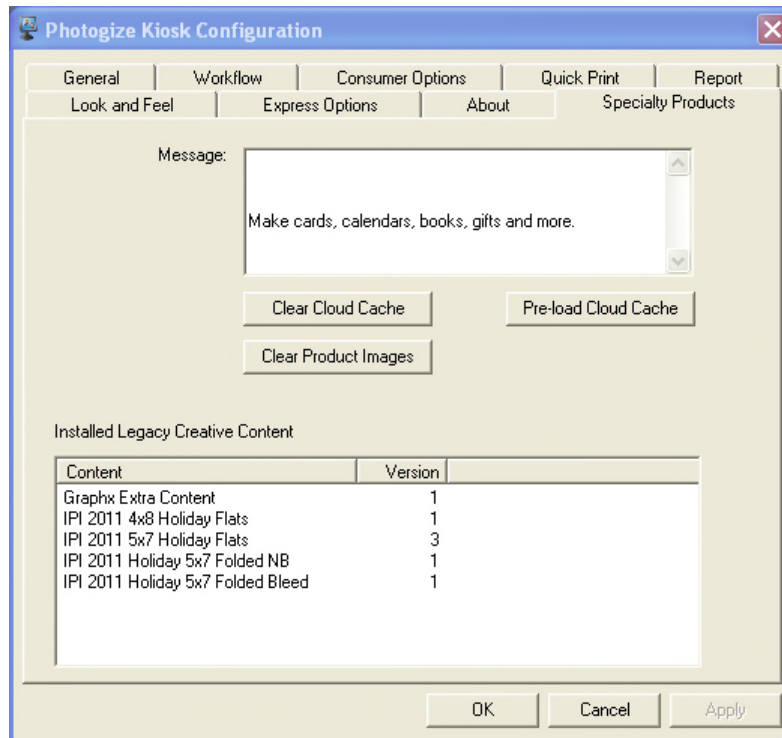

The Specialty configuration page lets you manage the settings used for legacy and CloudCover specialty products.

Message

Set the message that the consumer sees at the start of the process.

Clear Cloud Cache

Delete all the CloudCover content on the kiosk

Pre-load Cloud Cache

Pre-load all CloudCover content.

Clear Product Images

Delete JUST product images (leave templates intact).

Installed Creative Content

A summary of extra legacy content that is installed on the kiosk.

About



The About Page has version information and lets you check for and install updates to the application by clicking *Check For Updates*. If an update is available, you will be asked to download and install it.

You can also check the status of your license or activate your copy of Photogize Kiosk by clicking *License Manager*.



Deploying Kiosk

Once you have configured Kiosk, remember to remove the keyboard and mouse from the system (for security) and restart it.



Putting PrintWizard on Kiosk-produced CDs

If you subscribe to the PrintWizard Channel, you can distribute PrintWizard and Preclick Organizer on every CD that is burned by Kiosk.

1. Create a folder on the Kiosk to hold the PrintWizard files that will get burned to CD. For example: *c:\pwimage*
2. Copy the latest *PhotogizePrintWizardInstall.exe* file into this folder. You can get this file by putting the *Download* link specified in the Account properties in Photogize Lab into a browser address. When prompted, save the *PhotogizePrintWizardInstall.exe* file to the folder you created (e.g.: *c:\pwimage*)
3. The installation application name is a "long" filename and some CD drives may have a problem reading the file. After copying the installer into the working folder, rename it to *pinstall.exe*.
4. Copy the contents of the PrintWizardHelperFiles folder in the Kiosk application folder (usually *C:\Program Files\Graphx\Photogize Kiosk*) into the *c:\pwimage* folder.
5. On the Consumer Options tab in the Kiosk Configuration Manager, set the *Extra Folder to CD* field to *c:\pwimage*.

Every CD that Kiosk burns will now include a self-installing copy of PrintWizard and Preclick Organizer. The CD will autorun if and only if PrintWizard is NOT already installed on the machine in question.



Using Kiosk with Photogize Producer™

To enable Photogize Producer Premium DVD and CD production on your Photogize Kiosk:

1. License and enable Producer on Photogize Lab.
2. Make sure that your Kiosk is connected via *LAN*, *Internet* or *KeySweep* to your Producer-enabled copy of Photogize Lab.
3. Enter Kiosk admin mode, click *Configure Kiosk*, then select the *Consumer Options* tab. Change *Enable CD Burning* to *Producer*.

The screenshot shows the 'Photogize Kiosk Configuration' dialog box with the 'Consumer Options' tab selected. The dialog has a title bar with a close button. Below the title bar are four tabs: 'Look and Feel', 'Express Options', 'About', and 'Specialty Products'. The 'Consumer Options' tab is active, showing various configuration options. At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

Look and Feel	Express Options	About	Specialty Products
General	Workflow	Consumer Options	Quick Print

Enable Online Sharing: Default PC Email:

Enable Online Access: PC Acct:

Disc Production: Price: \$ ☐ Write Viewstrip to CD

Extra Folder to CD:

Homepage:

Print URL:

Share URL:

Customer Name: Customer Address:

Customer Phone: Customer Email:

Credit Card Required:


Thank You Message:

Default Promotion:

Producer Only Mode

You can configure Kiosk to **ONLY** produce Premium DVDs and CDs. To do this:


1. Enable Kiosk for Producer
2. Enter Kiosk admin mode, click *Configure Kiosk*, then select the *Express Options* tab. Uncheck all the Standard and Quick print options.
3. Click OK.

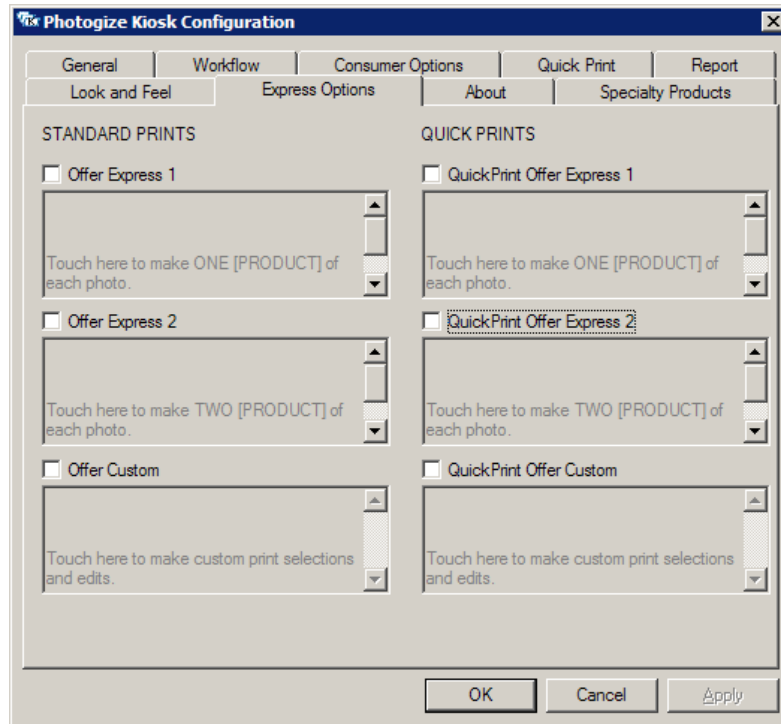

Demoing the UI

You can test the Producer UI even if you don't own Producer. To do this:

1. Enter Kiosk admin mode, click *Configure Kiosk*, then select the *Consumer Options* tab. Record your current *Enable CD Burning* setting.
2. Change *Enable CD Burning* to *Producer*.
3. Select the *Workflow* tab.
4. Record the current *Mode* and *XConnect Folder* settings.
5. Change The *Mode* to *Send Orders to Photogize Lab via LAN* and *XConnect Folder* to the Demo folder in the Photogize Kiosk application folder (usually *c:\Program Files\Graphx\Photogize Kiosk\Demo*).
6. Click *OK*

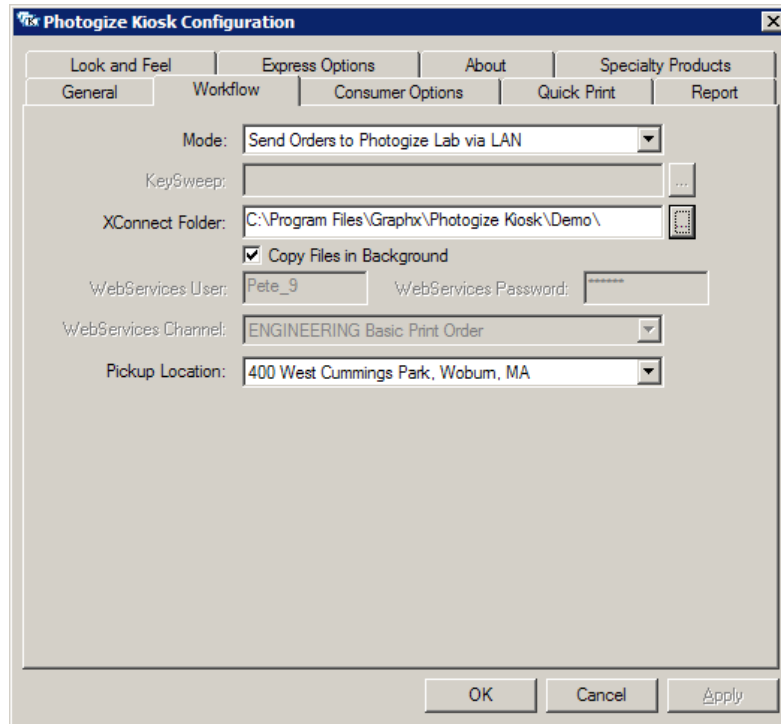

You will now be given Producer DVD creation options when you use the Kiosk. Note that no orders will be produced.

Once you have finished testing, be sure to reset your *Configure Kiosk*, *Mode* and *XConnect Folder* settings to their original states.

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Graphx, Inc. assumes no liability resulting from errors or omissions in this document, or from the use of the information contained herein. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of Graphx.

Graphx reserves the right to make changes in the product design without reservation and without notification to its users. RasterPlus®, Photogize®, and Graphx® are registered trademarks of Graphx, Inc. All other trademarks are the property of their respective owners.

© Copyright 2009-2015 Graphx, Inc., all rights reserved.

Graphx, Inc.
400 West Cummings Park
Woburn, MA 01801
Tel. 781.932.0430
Fax. 781.932.0855
www.photogize.com
www.graphx.com